

## **Re-tuning your TV or Set top Box**

Digital restacking is occurring and retuning of your digital equipment is required.

It is recommended to "Auto Tune" your TV or set top box when instructed. This will scan the channels and automatically lock in all available channels.

In some cases you may need to manually tune your TV.

If manual tuning is required, do a factory reset of your TV and scan the following broadcast Channels manually one by one.

In some circumstances with old equipment, you may need to enter the Broadcast Frequency.

### ***Digital TV channel plan:***

#### ***Kings Cross Repeater/Transmitter (Kings Cross)***

<b>Service/ Network</b>	<b>Broadcast RF Channel</b>	<b>Broadcast Frequency (MHz)</b>
CH7	<b>28</b>	529.5
ABC	<b>30</b>	543.5
CH10	<b>31</b>	550.5
SBS	<b>32</b>	557.5
CH9	<b>33</b>	564.5

Each network has multiple Freeview channels that are broadcast within their allocated transmission channel.

Your Digital TV automatically allocates the channel numbers.  
*(ie: OneHD sport is on CH1, ABC news is on CH24)*

See: [www.freeview.com.au](http://www.freeview.com.au) for information on the channels available.

---

***It is recommended that All Antenna leads between the wall plate and TV including the interconnect antenna leads between a DVR or Set top box to the TV should be replaced with high quality Quad shield coaxial leads.***

***These leads provide the best possible screening from external interference.***